
alp/5299 air seal 6/20/09 10:49 AM Page 1


Installation Details



A) Installation on the wall

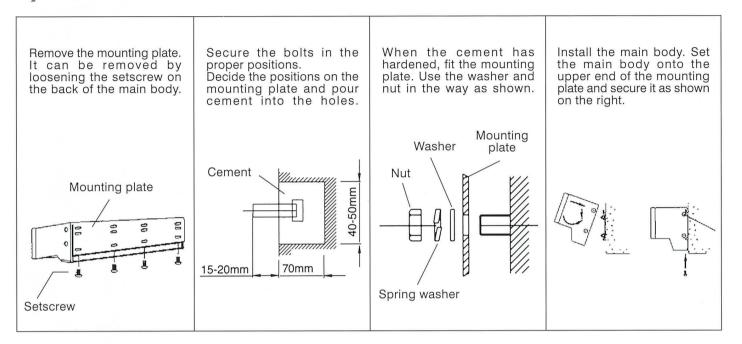

B) Hanging from the ceiling

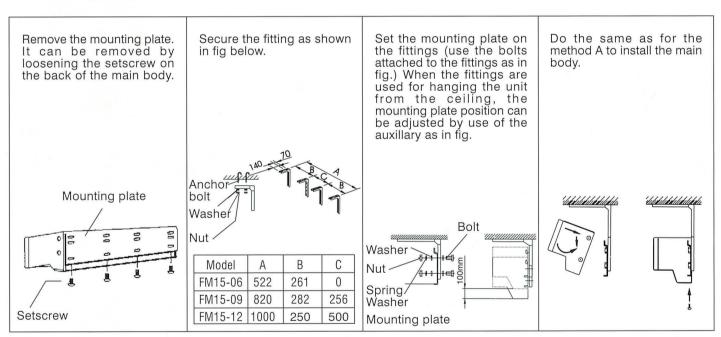

Installation Precautions

Do not allow gaps between the Air Curtains unit and the wall.

When hanging it from the ceiling, use optional fittings. Unit should be installed at a height of not more than 3m from bottom of unit.

Install the unit in a sturdy place free from vibration. | it is recommended to install two or more units

Provide 20-40mm gap between Air Curtains.

Do not install units in a place where it is splashed by water, exposed to excessive steam, explosive gas or


When the entrance is wider than the Air Curtains | Always install the unit on the indoor side.

Maintenance



Operation

- 1) Turn on the switch.
- 2) The switch has 2 positions of high and low.
- 3) Adjust the air direction shift plate according to the conditions as shown on right.

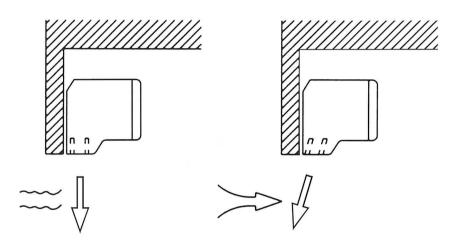

Precautions while maintenance

- 1) Disconnect power source before working on unit. Routine maintenance must be done every year.
- 2) Use the unit at the rated voltage and frequency indicated on the name plate.
- 3) Never use petrol, benzene, thinner or any other such chemicals for cleaning the air curtain.
- 4) Do not allow water to enter the motor.

For further information, please contact

AIR SEAL PRODUCTS



Marketed by:

Alpha Star TRADING

Dubai, UAE: P.O. Box 80955. Deira, Fish Roundabout Tel: 971 4 2234928 Fax: 971 4 2239349 Email: astartrd@eim.ae

Abu Dhabi, UAE: Muroor Road Next to Red Crescent Bldg Tel: 971 2 6417599 Fax: 971 2 6418511 Email: astarauh@eim.ae

Doha, Qatar: Salwa Road. Ain Khalid Roundabout Tel: 974 4582128 Fax: 974 4501270 Email: alphastar@gatar.net.ga

Chennai, India: M/s Alpha Star Trading (P) Ltd. #145 (old #77), Ground Floor Perambur Barrecks Road Vepary, Chennai - 600 007 Telefax: +91 44 42822367 Email: fareed@alphastarindia.com



Create an invisible door



Air curtain is an essential accessory for an air-conditioned area which when installed at entrances of airconditioned Stores, Supermarkets, Theatres, Meeting Rooms, Restaurants, Offices, Factories and Warehouses, guards against conditioned air leaving conditioned space. It also prevents entry of dust, harmful insects and fumes from outside.


Features

Easy installation.


Two-speed switch facilitates the fan to run at high or low speeds as per requirement.


Adjustment of air direction is achieved conveniently with shift plate.


Benefits of Air Curtains

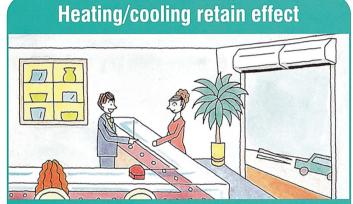



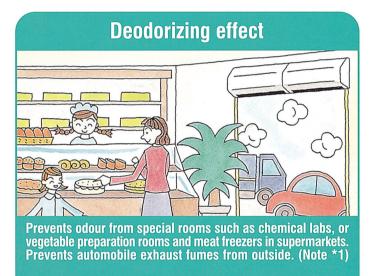

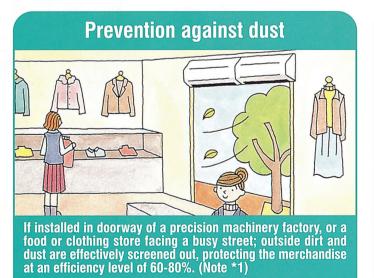

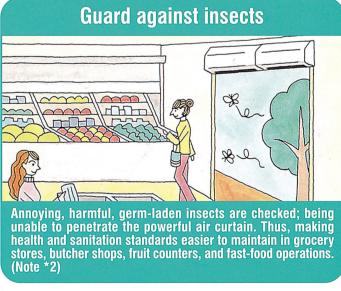


Note: *1) Outside wind, air flow from air-conditioners, ventilator use, etc., may significantly lower the shielding effectiveness. *2) The effectiveness against insects depends largely on the kind of insect, surrounding environment, air velocity of the Air Curtains, etc. If more effective insect prevention is required, use the Air Curtains in combination with other methods.

Specifications



Model	Rating voltage {V}	Rating frequency {Hz}	Power {W}	Air delivery {CMH}		Noise {dB}	
				HI	LO	HI	LO
FM15-06	220~	50	90	1002	700	54	51
FM15-09	220~	50	140	1506	1057	57	53
FM15-12	220~	50	160	2010	1407	58	54

Note: The values in specification tables are representative characteristic values at 220V 50Hz and the ambient temperature of 20°C. The noise values were measured at an angle of 45° below the air outlet, from a distance of 1.5 meters inside the room. The outlet velocity shows maximum value.

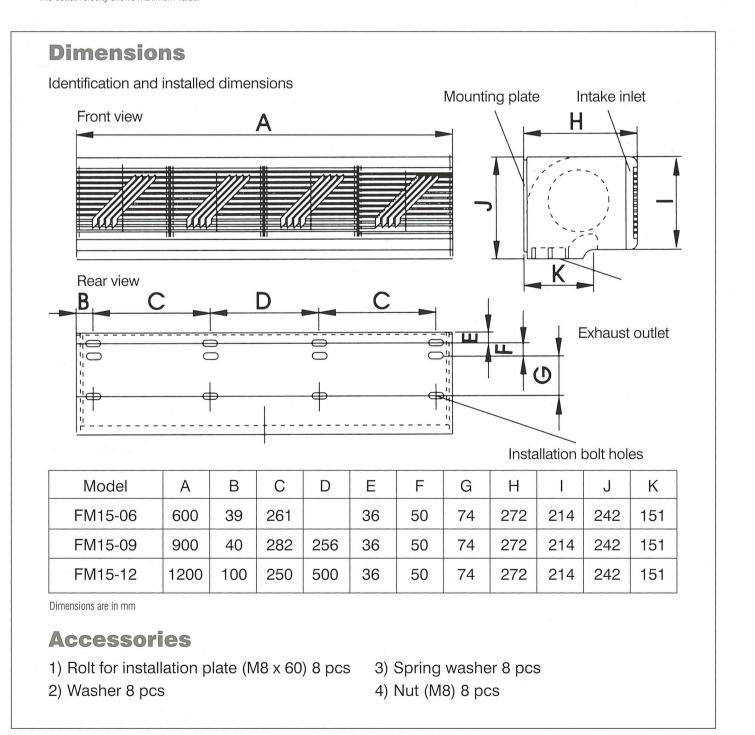

Electric Wiring Details



Electric work

